

Rekluse Motor Sports

The z-Startä Clutch

XR 650R

Installation Guide

Copyright 2002 Rekluse Motor Sports
z-Start Revision 3.000
RMS114 – XR 650R

191-214


Manual Revision: 082305

Rekluse Motor Sports, inc.
110 E. 43rd Street
Boise, Idaho 83714
208-426-0659
support@rekluse.com

Required Tools

8mm socket	2 Sets of feeler gauges
10mm socket	Inch Pound Torque Wrench
4mm allen key socket	Torx T10 driver tip (included)
3mm allen	Blue Loctite 243 (oil resistant)
1/4 inch driver (for included Torx T10 driver tip)	

z-Start Overview

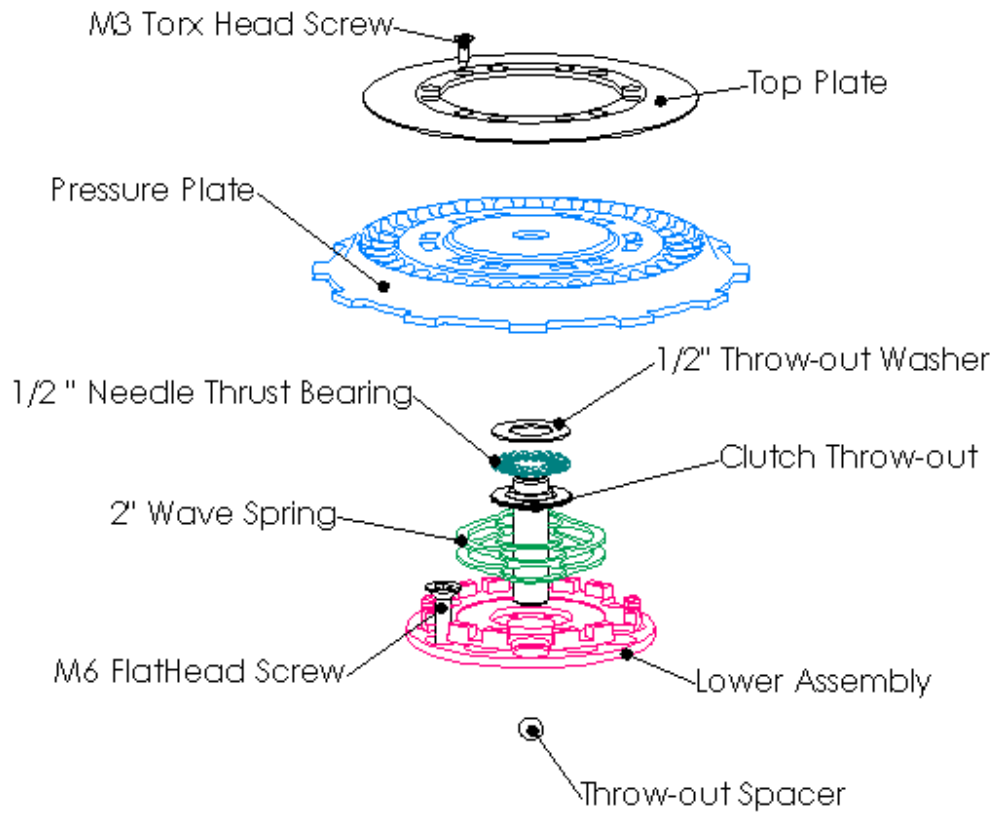

Note: The Lower Assembly is packaged underneath the Pressure Plate and held in place with two screws through the Top Plate.

Included Parts for the z-Start Clutch

Note: spare screws, balls and shims may be included with your clutch

Top Plate	2" (51mm) Wave Spring (C200L2)
Pressure Plate	1.5" (38mm) Wave Spring (C150L2)
Lower Assembly	12 x M3 #10 torx screws
Rekluse Clutch Throw-out	30 x 3/8" (9.53mm) balls
2 x .062 (1.6mm) Drive Plates	20 x .010" (0.25mm) Mounting Shims
2 x .047 (1.2mm) Drive Plates	2 x Rekluse Clutch Cover Gasket
1/2" (12.7mm) Throw-out Needle Thrust Bearing	External Adjuster
1/2" (12.7mm) Flat Throw-out Thrust Washer	Light External Adjuster Spring
4 x M6 Flat Head Screws	Medium External Adjuster Spring
4 x M6 Threaded Studs (to assist mounting)	

Basic z-Start Clutch Operation

The z-Start Auto Clutch functions through centrifugal force. As engine RPM increases, the balls contained in the z-Start Pressure Plate travel up the ball ramps and push against the Top Plate. This action forces the Pressure Plate to engage the clutch pack.

Installation Tips

In order for the z-Start Clutch to perform properly, it must be mounted properly.

- Measuring and maintaining the Installed Gap is **critical**. If the Installed Gap is too big the clutch will slip excessively and cause rapid clutch wear. If the Installed Gap is too small, the clutch will drag and cause engine stall.
- Recognize that the Pressure Plate travels along the tabs of the Lower Assembly as it engages and disengages. Anything preventing this travel will prevent full engagement and cause the clutch to slip excessively.
- If you will be installing the Rekluse *Perch Adjuster* as a manual override for your z-Start Clutch, it is critical to have the cable slack adjusted properly. First complete the installation of the z-Start Clutch using this manual and ensure proper installed gap. Then refer to the Rekluse *Perch Adjuster* manual to ensure proper cable slack adjustment.
- ***Be very careful not to drop any screws, washers, balls, or springs into the crankcase opening!*** It is surprisingly easy to drop a little screw or washer down into your crankcase. It is not always so easy to get it out. Make sure all parts going in and coming out are accounted for before you finish the installation. A strong magnetic probe can often be used to retrieve little parts if you happen to drop something in.

Bike Preparation and Disassembly

1. Unhook the return spring on the clutch actuator arm located on top of your engine case (not all bikes have these). Use a flat blade screwdriver to push the hook of the spring off of the clutch actuator arm so the spring no longer pushes against the clutch actuator arm.

If you did not purchase the Rekluse *Perch Adjuster*, remove the clutch cable, clutch lever and rubber clutch perch cover. If you have an after-market hot-start lever you can remove your clutch perch. If you did purchase the Rekluse *Perch Adjuster* only disconnect your clutch cable at your clutch lever.

2. Turn the gas petcock to the off position and route the gas cap vent tube into the air. When you lay the bike over on its side, the gas in the bowl will drain out of the overflow tube. Be prepared to catch the gas in a suitable container to prevent a fire hazard.
3. Lay the motorcycle over on its left side.
4. Remove the clutch cover bolts with an 8mm socket and carefully remove the clutch cover.

5. Using a 10mm socket, remove the bolts holding the stock pressure plate to the inner clutch hub. Lift off the pressure plate and the clutch lifter assembly. The clutch lifter assembly consists of the **Clutch Throw-out**, a **bearing**, and a **washer**.

Stock Pressure plate, stock lifter assembly, 6 bolts and springs are not reinstalled.

Clutch Pack Configuration

6. Remove the entire clutch pack keeping the clutch plates in order from top to bottom (inner most to outer most). Remove the clutch boss spring from the bottom of your clutch pack.

Note: The clutch boss spring consists of two rings, one bevel shaped and one flat, which locate in the inner diameter of the bottom friction disk. **You must remove both rings.**

7. Move the bottom friction disk (it has a larger inner diameter than the rest) to the middle of the clutch pack and place one of the thicker walled friction disks at the bottom of the clutch pack. This will provide better clutch performance.
8. Remove 2 of the stock .055 (1.4mm) steel drive plates from the clutch pack and replace them with 2 of the provided *Rekluse .047 (1.2mm) steel drive plates*. The other included *0.062 Drive Plates* are only used for adjustments due to wear.
9. Install the newly configured clutch pack and insure the tabs of the top friction disk lie in the same clutch basket windows as the rest of the friction disk tabs.


Note: At this point you will have 2 stock drive plates removed from you clutch pack.

Warning: The top of the clutch pack must be a **friction disk**.

Installing the Lower Assembly

10. Place the included M6 studs into the bike's center clutch standoffs and place 5 Mounting Shims over each standoff. Thread in the studs until they are almost flush with shim stack. **See picture below.**

Install M6 studs and carefully place exactly 5 Mounting Shims over each stud.

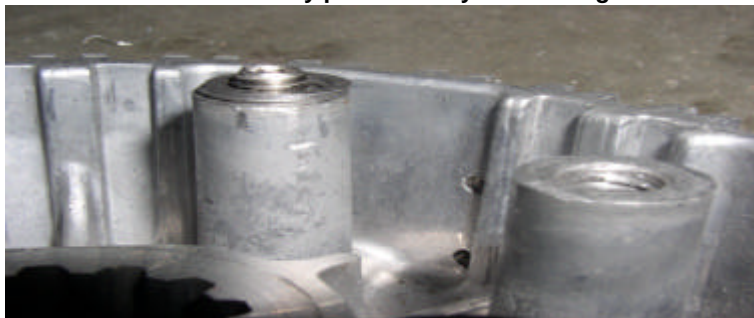


11. Place the z-Start *Lower Assembly* over the M6 Threaded Studs so the Threaded Studs pass through the set of 4 countersunk holes in the z-Start *Lower Assembly*.
12. Carefully remove M6 Threaded Studs one at a time and replace them with M6 Flat Head Screws. **Apply a small amount of blue Loctite 243 to each screw** and torque to 96 inch pounds with a torque wrench. **Make sure none of the Mounting Shims fall out from under the z-Start Lower Assembly.** After the screws are torqued-down, check to ensure the top part of the *Lower Assembly* spins freely.

Assembling the Rekluse Throwout, Pressure Plate, and Top Plate

13. Guide the **Rekluse Clutch throw-out** into the hole in the transmission input shaft.

Place the $\frac{1}{2}$ " *Needle Thrust Bearing* on top of the *Rekluse Throw-out* followed by the $\frac{1}{2}$ " *Throw-out Thrust Washer*. Place both of the *Wave Springs* on top of the Lower Assembly—the smaller spring nests inside of the larger one. **See following pictures.**


Note: Both *Wave springs* are not shown in the pictures below—be sure to install both **springs**.

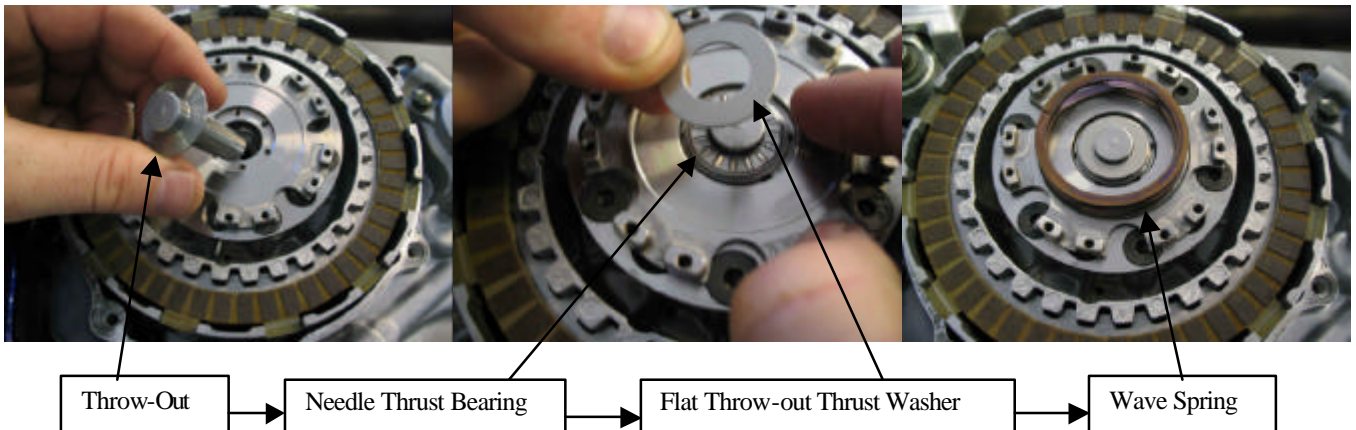


Warning: Perform the next step away from the bike to keep the balls from falling into the transmission.

14. Place a small amount of oil into the ball slots of the *Pressure Plate* and insert the 30 $\frac{3}{8}$ " *Balls*.
15. Place the *Pressure Plate* with the 30 *Balls* in place over the z-Start *Lower Assembly*. Index the outer tabs of the *Pressure Plate* into the windows of the clutch basket. **The outer tabs of the Pressure Plate must rest in the same clutch basket windows that the outer tabs of the friction disks do.**

Also insure that the tabs of the *Lower Assembly* pass through the associated cut-outs in the *Pressure Plate*. Make sure the top of the *Rekluse Throw-out* assembly passes through the hole in the center of the z-Start *Pressure Plate*. **See following picture.**

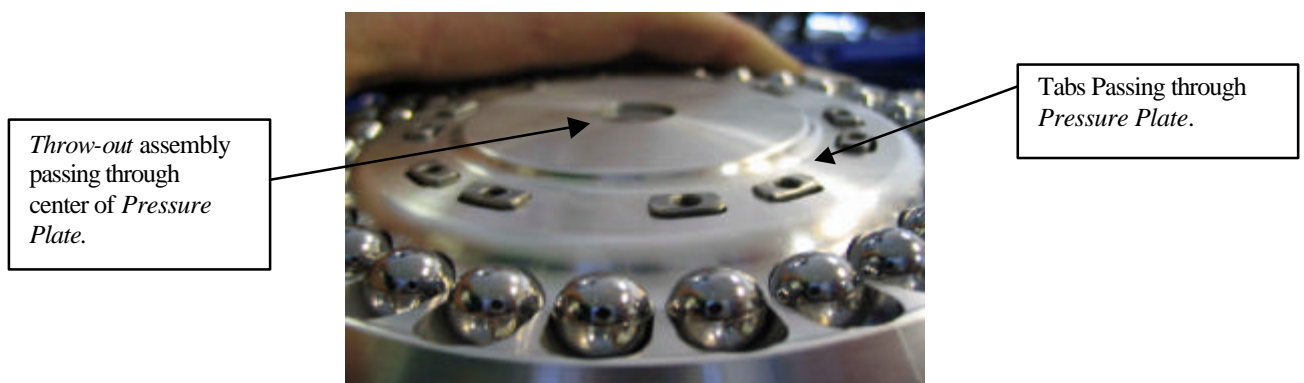

16. While holding the *Pressure Plate* down place the *Top Plate* over the *Pressure Plate* and fasten it to the tabs of the Lower Assembly with three of the M3 screws, through the three marked holes in the *Top Plate*. Lightly tighten each screw using a 1/4 inch driver and the included Torx T10 driver tip. **See following picture.**

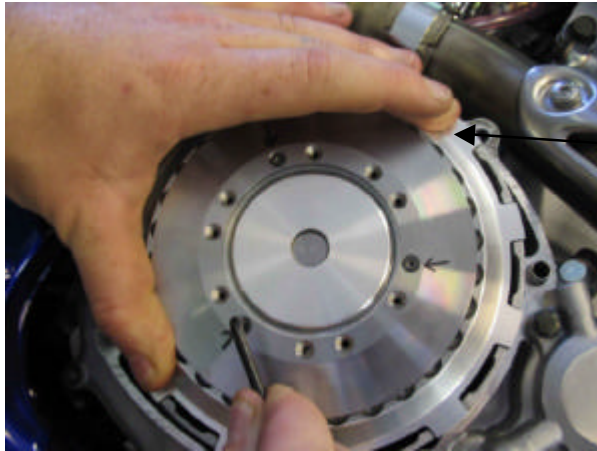

Holding down *Pressure Plate* until *Top Plate* is securely fastened.

Note: You will have to overcome the z-Start *Wave Spring* and hold the *Pressure Plate* down until the 3 screws are securely fastened in order to tighten the *Top Plate* down properly.

Determine the installed gap of the Z-Start

17. Measure the installed gap of the z-Start. Two sets of feeler gauges are required to measure the Installed Gap. The feeler gauges must be placed between the top most **friction disk** and the top-most **steel drive plate** in the clutch pack 180 degrees apart. **See following pictures.**

Note: Insert the 2 sets of feeler gauges directly across from one another (180 degrees apart) to avoid the clutch pack from rocking resulting in an inaccurate measurement. Find the thickest feeler gauge that still slides back and forth with slight resistance.



The installed gap should measure between .030" (0.76mm) and .042" (1.07mm). If the gap is correct, move on to the next step. If the installed gap measurement is off, then the installed gap needs to be adjusted due to manufacturing variances in the bike's center clutch. If the measurement is *greater than .042"* replace one *Rekluse .047" (1.2mm) drive plate* with a stock *.055" (1.4mm) drive plate*. If the measurement is *less than .030"* replace one stock *.055" (1.4mm) drive plate* with a *Rekluse .047" (1.2mm) drive plate*.

Note: Be sure to review the included Break-in and Maintenance Guide for clutch pack wear adjustments.

Final Installation Steps

Note: Use 243 Loctite (Blue, oil resistant) to secure all M3 Torx screws

- Using a small amount of Blue Loctite 243, install the rest of the M3 torx head screws and torque to 10 inch/pounds. 10 inch-pounds requires a good crank with the included Torx T10 driver tip, but be careful not to bend the head of the T10 driver tip. Remove the three marked M3 screws, add Loctite, and tighten.
- Re-install your clutch cover with the 2 included *Rekluse Clutch Cover Gaskets*. Hand-tighten each of the clutch cover bolts, then torque to 6 to 8 foot/pounds in 2 steps.

Warning: Both Rekluse gaskets must be used or considerable clutch damage will result.

- If you did **NOT** purchase the z-Start Perch Adjuster continue on to **step 18**.

If you did purchase the z-Start Perch Adjuster proceed to the z-Start Perch Adjuster Instructions included with the Perch Adjuster.

WARNING: After a 20 minute break-in period, the clutch plates will seat in and you must re-measure the Installed Gap to guarantee the Installed Gap is within the prescribed range—make drive plate adjustments if necessary. See step 14. Clutch break-in re-measurement of the Installed Gap is necessary whenever new clutch plates are installed.

WARNING: Refer to the “Safety Warnings” and “Break-in Tuning and Maintenance Guide” before operating the z-Start clutch.

- Basic External Adjuster Install outlined below.

Basic External Adjuster Install



An extension spring is used to set the resistance on the pressure plate, which sets the engagement RPM of the z-Start Clutch. Two extension springs are provided in your kit:

- The light spring will give a narrow adjustment range for RPM engagement settings and will engage the clutch rapidly.
- The medium spring will allow for a wider range of RPM engagement settings and a medium engagement rate.

Slip one end of the spring into the portion of the bike's clutch actuator arm that holds the clutch cable. Thread the other end of the spring into the *External Adjuster Bolt*. Slide the *External Adjuster Bolt* into the clutch bracket and screw down one of the nuts onto the adjuster bolt.

Adjust your engagement by loosening the nut for a lower RPM Engagement or tighten the nut for a higher RPM Engagement. After making your initial adjustments, use the other nut to lock the *External Adjuster Bolt* into place.

Note: After adjustment is complete and spring anchor is set correctly remove spring and anchor, tighten lock nut against adjustable nut and put spring and anchor back in place, attach spring to clutch arm, see pictures above.