

Rekluse Motor Sports

The z-Start™ Clutch

Z400

DVX400

KFX400

(2005)

Installation Guide

Copyright 2002 Rekluse Motor Sports
z-Start Revision 3.000

RMS164 - Z400 – DVX400 – KFX400 z-Start Clutch

191-264

Manual Revision: 033105

Rekluse Motor Sports, inc.

110 E. 43rd Street


Boise, Idaho 83714

208-426-0659

support@rekluse.com

Required Tools

8mm socket	2 Sets of feeler gauges
10mm socket	Inch Pound Torque Wrench
4mm allen key socket	Torx T10 driver tip (included)
3mm allen	Blue Loctite 243 (oil resistant)
1/4 inch driver (for included Torx T10 driver tip)	

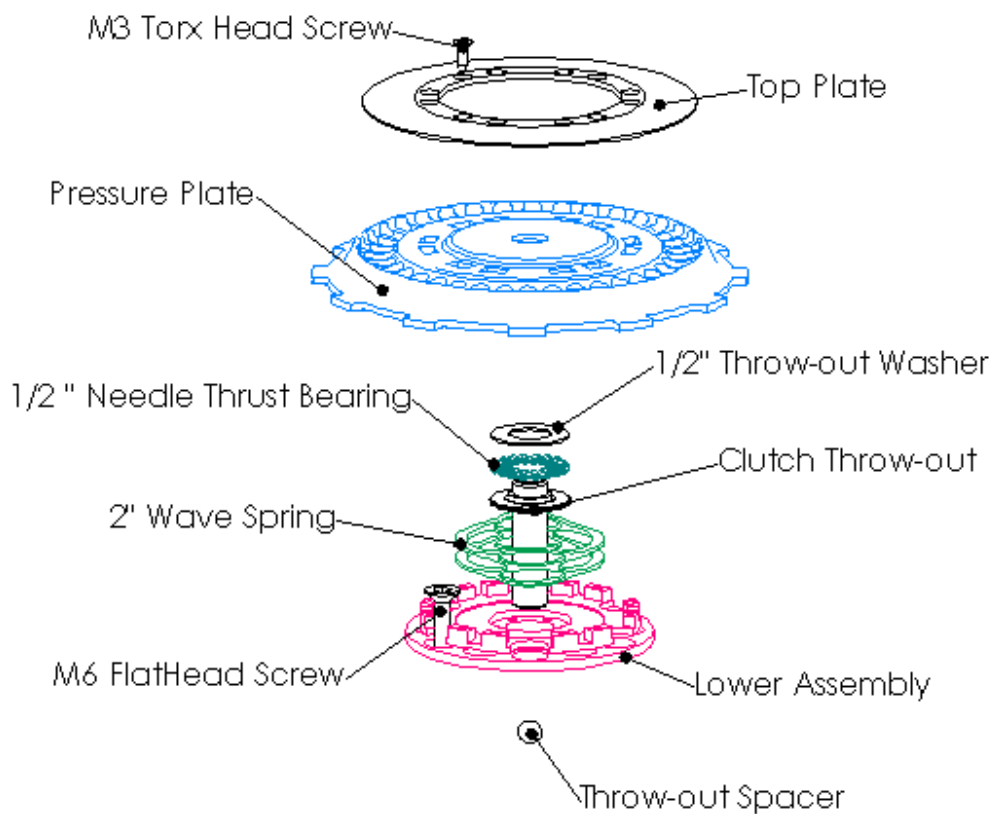

z-Start Overview

Note: The Lower Assembly is packaged underneath the Pressure Plate and held in place with two screws through the Top Plate.

Included Parts for the z-Start Clutch

Note: spare screws, balls and shims may be included with your clutch

Top Plate	6 x M6 Threaded Studs (to assist mounting)
Pressure Plate	12 x .010" (0.25mm) Mounting Shims
Lower Assembly	6 x M6 Flat Head Screws
04' LTZ400 Center Clutch Hub	2" (51mm) Wave Spring (C200L1)
Clutch Throw-out	2" (51mm) Wave Spring (C200L2)
7 x .047" (1.2mm) Drive Plates	2 x 2" (51mm) Spring Adjustment Washers
1 x .055 (1.4mm) Drive Plate – for wear adjustment	12 x M3 #10 torx screws
½" (12.7mm) Throw-out Needle Thrust Bearing	20 x 3/8" (9.53mm) balls
½" (12.7mm) Flat Throw-out Thrust Washer	10 x 3/8" (9.53mm) Tungsten Carbide balls

Basic z-Start Clutch Operation

The z-Start Auto Clutch functions through centrifugal force. As engine RPM increases, the balls contained in the z-Start Pressure Plate travel up the ball ramps and push against the Top Plate. This action forces the Pressure Plate to engage the clutch pack.

Installation Tips

In order for the z-Start Clutch to perform properly, it must be mounted properly.

- Measuring and maintaining the Installed Gap is **critical**. If the Installed Gap is too big the clutch will slip excessively and cause rapid clutch wear. If the Installed Gap is too small, the clutch will drag and cause engine stall.
- Recognize that the Pressure Plate travels along the tabs of the Lower Assembly as it engages and disengages. Anything preventing this travel will prevent full engagement and cause the clutch to slip excessively.
- If you will be installing the Rekluse *Perch Adjuster* as a manual override for your z-Start Clutch, it is critical to have the cable slack adjusted properly. First complete the installation of the z-Start Clutch using this manual and ensure proper installed gap. Then refer to the Rekluse *Perch Adjuster* manual to ensure proper cable slack adjustment.
- **Be very careful not to drop any screws, washers, balls, or springs into the crankcase opening!** It is surprisingly easy to drop a little screw or washer down into your crankcase. It is not always so easy to get it out. Make sure all parts going in and coming out are accounted for before you finish the installation. A strong magnetic probe can often be used to retrieve little parts if you happen to drop something in.

Bike Preparation and Disassembly

1. Disconnect your clutch cable at your clutch lever.
2. Drain the coolant from the engine into a suitable container so it can be re-used.
3. Turn the gas petcock to the off position and lean the quad against a fixed stationary object at a suitable angle so that the quad is stable—the further you lean it over the easier the install will go. Place blocks or stands under front and rear wheels to prevent the quad from falling. When Quad is tipped on its side, be prepared to catch the excess gas and oil in a suitable container to prevent a fire hazard.
4. Remove the rear brake lever.
5. Remove the clutch cover bolts with an 8mm socket and carefully remove the clutch cover. Be careful not to damage the cover gasket so it can be reused.

6. Using a 10mm socket, remove the bolts holding the stock pressure plate to the inner clutch hub. Lift off the pressure plate and the clutch lifter assembly. The clutch lifter assembly consists of the **Clutch Throw-out**, a **bearing**, and a **washer**.

Stock Pressure plate, 6 bolts and springs, and clutch lifter assembly are not reinstalled.

Center Clutch Replacement and Clutch Pack Configuration

7. Remove the entire clutch pack and set it aside.
8. Remove the clutch boss spring from the bottom of your clutch pack.

Note: The clutch boss spring consists of two rings, one bevel shaped and one flat, that locate in the inner diameter of the bottom friction disk. **You must remove both rings.**

9. Using a socket, remove the stock center clutch and replace it with the included Rekluse center clutch. Insure that thrust washer between the center clutch and basket remains in place when installing the new center clutch. Torque the center clutch nut to 50 ft lbs.

Note: An impact wrench works best, otherwise you will have to lock the transmission to remove the center clutch nut.

10. Remove the bottom friction disk and drive plate from the clutch pack. Do not re-install.
11. Remove the remaining 7 stock .062 steel drive plates from the clutch pack and replace them with 7 of the provided *Rekluse .047 steel drive plates*. Re-install the reconfigured clutch pack.

Note: At this point you will have 8 stock drive plates and the bottom friction disk removed from you clutch pack.

Warning: The top of the clutch pack must be a **friction disk**.

Installing the Lower Assembly

12. Place the included M6 studs into the bike's center clutch standoffs and place 2 Mounting Shims over each standoff. **See picture below.**

Install M6 studs and carefully place exactly 2 Mounting Shims over each stud.




13. Place the z-Start *Lower Assembly* over the M6 Threaded Studs so the Threaded Studs pass through the corresponding set of 6 countersunk holes in the z-Start *Lower Assembly*.
14. Carefully remove M6 Threaded Studs one at a time and replace them with M6 Flat Head Screws. **Apply a small amount of blue Loctite 243 to each screw** and torque to 96 inch pounds with a torque wrench. **Make sure none of the Mounting Shims fall out from under the z-Start Lower Assembly.** After the screws are torqued-down, check to ensure the top part of the *Lower Assembly* spins freely.

Assembling the Rekluse Throwout, Pressure Plate, and Top Plate

15. Guide the **Rekluse Clutch throw-out** into the hole in the transmission input shaft.

Place the $\frac{1}{2}$ " *Needle Thrust Bearing* on top of the *Rekluse Throw-out* followed by the $\frac{1}{2}$ " *Throw-out Thrust Washer*.

Place the 2" *C200L2 Wave Spring* on top of the Lower Assembly. The C200L2 Wave Spring is the one that came packaged inside the z-Start and it is the taller of the 2 Wave Springs included. Refer to the Spring Adjustment chart at the end of this manual for setting descriptions and options. **See following pictures.**

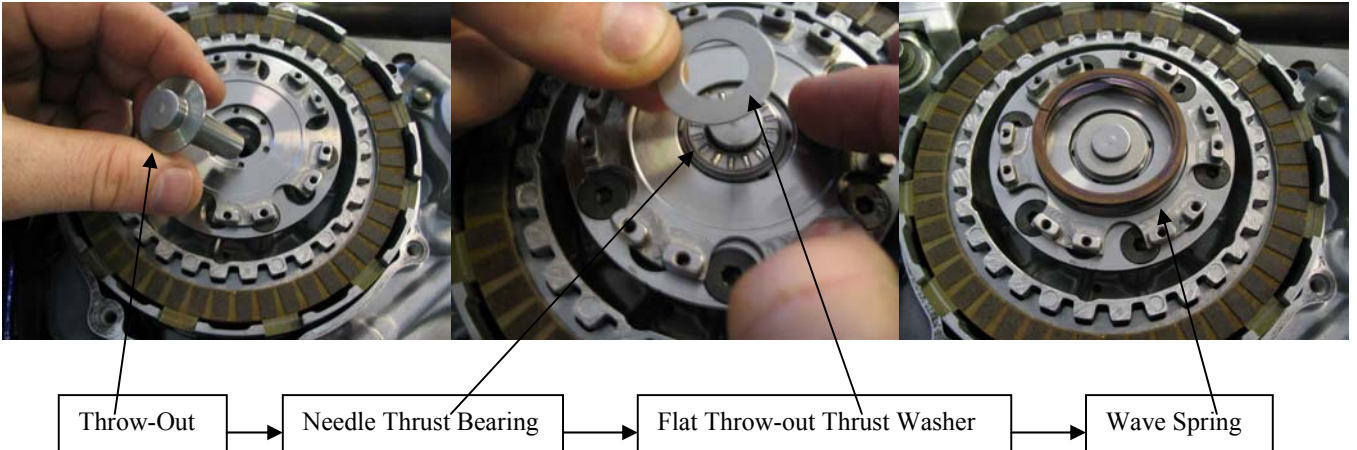


Warning: Perform the next step away from the bike to keep the balls from falling into the transmission.

16. Place a small amount of oil in each of the *Pressure Plates* ball grooves. Place 1 *Tungsten Carbide ball* followed by 2 *steel balls*. Repeat the pattern until all slots contain a ball. **It is very important to have the Tungsten Carbide balls spaced evenly around the Pressure Plate.**
17. Place the *Pressure Plate* with the 30 Balls in place over the z-Start *Lower Assembly*. Index the outer tabs of the *Pressure Plate* into the windows of the clutch basket. **The outer tabs of the Pressure Plate must rest in the same clutch basket windows that the outer tabs of the friction disks do.**

Also insure that the tabs of the *Lower Assembly* pass through the associated cut-outs in the *Pressure Plate*. Make sure the top of the *Rekluse Throw-out* assembly passes through the hole in the center of the z-Start *Pressure Plate*. **See following picture.**



18. While holding the *Pressure Plate* down place the *Top Plate* over the *Pressure Plate* and fasten it to the tabs of the *Lower Assembly* with three of the M3 screws, through the three marked holes in the *Top Plate*. Lightly tighten each screw using a 1/4 inch driver and the included Torx T10 driver tip. **See following picture.**

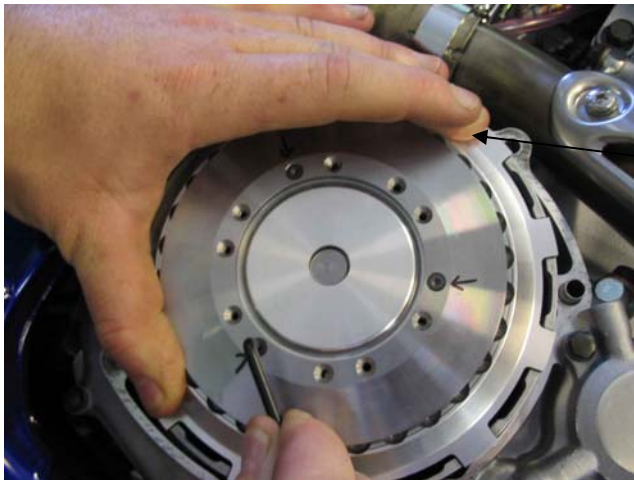

Holding down *Pressure Plate* until *Top Plate* is securely fastened.

Note: You will have to hold the *Pressure Plate* down until the 3 screws are securely fastened in order to tighten the *Top Plate* down properly.

Determine the installed gap of the Z-Start

19. Measure the installed gap of the z-Start. Two sets of feeler gauges are required to measure the Installed Gap. The feeler gauges must be placed between the top most **friction disk** and the top-most **steel drive plate** in the clutch pack 180 degrees apart. **See following pictures.**

Note: Insert the 2 sets of feeler gauges directly across from one another (180 degrees apart) to avoid the clutch pack from rocking resulting in an inaccurate measurement. Find the thickest feeler gauge that still slides back and forth with slight resistance.



The installed gap should measure between .030" (0.76mm) and .042" (1.07mm). If the gap is correct, move on to the next step. If the installed gap measurement is off, then the installed gap needs to be adjusted due to manufacturing variances in the bike's center clutch. If the measurement is greater than .042" replace one *Rekluse .047" (1.2mm) drive plate* with a .062" (1.6mm) stock drive plate. If the measurement is less than .027" replace one stock .062" (1.6mm) drive plate with a *Rekluse .047" (1.2mm) drive plate*.

Note: 1 x .055" Drive Plate is included to make finer wear adjustments between stock and Rekluse .047" drive plates.

Note: Be sure to review the included Break-in and Maintenance Guide for clutch pack wear adjustments.

Final Installation Steps

Note: Use 243 Loctite (Blue, oil resistant) to secure all M3 Torx screws

20. Using a small amount of Blue Loctite 243, install the rest of the M3 torx head screws and torque to 10 inch/pounds. 10 inch-pounds requires a good crank with the included Torx T10 driver tip, but be careful not to bend the head of the T10 driver tip. Remove the three marked M3 screws, add Loctite, and tighten.
21. Re-install your clutch cover. Hand-tighten each of the clutch cover bolts, then torque to 6 to 8 foot/pounds in 2 steps.
22. Re-install your rear brake lever.
23. Refill the engine with the coolant drained from the engine in Step 2.
24. Re-attach the clutch cable to the clutch lever. It is necessary to adjust the slack in the clutch cable so that there is 5-10 mm of play at the end of the clutch lever when the engine is revved to at least 4500 RPM. **Start the engine and ensure the transmission is in neutral, rev the engine to 4500 RPM's, and adjust the clutch cable so that when the engine is revved there is 5-10 mm of play at the end of the clutch lever.**

Warning: The z-Start allows the bike to idle in gear just like if it were in neutral. Quickly revving the engine with the transmission in gear will cause the bike to lunge forward unexpectedly—always ensure the transmission is in neutral before adjusting the clutch cable slack.

Warning: Improper clutch-cable slack adjustment can cause excessive clutch slip and ultimately clutch failure.

WARNING: After a 20 minute break-in period, the clutch plates will seat in and you must re-measure the Installed Gap to guarantee the Installed Gap is within the prescribed range—make drive plate adjustments if necessary. See step 15. Clutch break-in re-measurement of the Installed Gap is necessary whenever new clutch plates are installed.

WARNING: Refer to the “Safety Warnings” and “Break-in Tuning and Maintenance Guide” before operating the z-Start clutch.

Adjusting the z-Start Engagement RPM

The engine speed at which the z-Start begins to engage the clutch, also called the stall speed, can be adjusted. Included with the z-Start is a 2" *Wave Spring* and two 2" *Spring Adjustment Washers* to fine tune the z-Start stall speed. The *Wave Spring* and *Spring Adjustment Washers* locate inside the z-Start between the *Pressure Plate* and *Lower Assembly*. To adjust the stall speed, it is necessary to remove the engine side cover and the M3 screws holding the z-Start *Top Plate* to access the *Wave Spring and Flat Steel Washers*. Refer to the z-Start Parts View and the installation instructions for detailed information on how to change the *Wave Spring and Spring Adjustment Washer* configuration.

Use the following chart as a guideline for setting the stall speed. Remember many factors can affect the stall speed from bike to bike so the following chart is only a guideline. You can also make fine tuning adjustments by adjusting your idle speed.

CS200L1 Wave Spring	0 x Flat Washers	Very Low Stall Speed (generally below a low idle)
CS200L1 Wave Spring	1 x Flat Washer	Low Stall Speed (typically just above idle)
CS200L1 Wave Spring	2 x Flat Washers	Medium Stall Speed
C200L2 Wave Spring	0 x Flat Washers	Medium Stall Speed (very near previous setup)
C200L2 Wave Spring	1 x Flat Washers	High Stall Speed

Note: do not use more than 1 Flat Washer with the C200L2 Wave Spring.